


# Mobile Print/Scan Guide for Brother iPrint&Scan



## Definitions of notes

We use the following icon throughout this user's guide:

 <b>Note</b>	Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.
---	---

## Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Android is a trademark of Google Inc.

Apple, Macintosh, Mac OS, iCloud, iPhone, iPod touch, iPad and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

**Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.**

©2011 Brother Industries, Ltd. All rights reserved.

# Table of Contents

## Section I For Android™ Devices

<b>1</b>	<b>Introduction</b>	<b>2</b>
	Overview .....	2
	Hardware requirement .....	3
	Supported operating systems .....	3
	Network settings .....	3
	Downloading Brother iPrint&Scan from the Android™ Market .....	5
<b>2</b>	<b>Printing</b>	<b>6</b>
	Printing from the mobile device's memory card .....	6
	Printing photos .....	6
	Printing PDF files .....	8
	Printing from a web browser .....	10
	Printing web pages .....	10
	Printing from other applications .....	13
	Printing photos .....	13
	Printing PDF files .....	14
	Printing text files .....	16
	Printing web pages .....	17
	Print Settings .....	19
<b>3</b>	<b>Scanning</b>	<b>21</b>
	Scanning documents .....	21
	Scanning directly to your mobile device's memory card .....	21
	Opening scanned images in other applications .....	23
	Scan Settings .....	27

## Section II For iOS Devices

<b>4</b>	<b>Introduction</b>	<b>29</b>
	Overview .....	29
	Hardware requirement .....	30
	Supported devices and operating systems .....	30
	Network settings .....	30
	Downloading Brother iPrint&Scan from the App Store .....	32

---

## **5      Printing      33**

---

Printing photos from your mobile device's photo album .....	33
For iPhone and iPod touch .....	33
For iPad .....	34
Printing photos taken with Brother iPrint&Scan .....	37
Printing from a web browser .....	39
For iPhone and iPod touch .....	39
For iPad .....	44
Printing data from the Clipboard .....	49
For iPhone and iPod touch .....	49
For iPad .....	51
Printing PDF files from other applications .....	53
For iPhone and iPod touch .....	53
For iPad .....	55
Print Settings .....	57

## **6      Scanning      59**

---

Scanning documents .....	59
Scanning documents and saving them in your mobile device's photo album .....	59
Sending by E-mail .....	63
Scanning documents and saving them to iCloud .....	68
Opening scanned images in other applications .....	72
Scan Settings .....	76

# **Section III For Windows<sup>®</sup> Phone Devices**

## **7      Introduction      78**

---

Overview .....	78
Hardware requirement .....	79
Supported operating systems .....	79
Network settings .....	79
Downloading Brother iPrint&Scan from the Windows <sup>®</sup> Phone Marketplace .....	81

## **8      Printing      82**

---

Printing images stored in your mobile device .....	82
Printing photos taken with Brother iPrint&Scan .....	84
Printing photos from other applications .....	86
Print Settings .....	88

## **9      Scanning      89**

---

Scanning documents directly to your mobile device .....	89
Scan Settings .....	91





# For Android™ Devices

---

Introduction	2
Printing	6
Scanning	21

## Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Android™ device, without using a computer.

Brother iPrint&Scan supports the following functions:

### ■ Printing

Even if your machine is not connected to your computer, you can print photos, PDFs, text files and web pages directly from your mobile device. (See *Printing* >> page 6.)

### ■ Scanning

Photos and documents scanned with your Brother machine can be saved directly to the memory card of your mobile device and opened with other applications. Additionally, if an E-mail application that supports JPEG and PDF files is installed on your mobile device, scanned images can be attached to outgoing E-mail messages and sent using your mobile device. (See *Scanning* >> page 21.)



### Note

- For a list of models supported by Brother iPrint&Scan please visit the Brother web site at <http://www.brother.com/apps/android/>.
- If your machine does not have a scanner, you cannot use the scan functions of Brother iPrint&Scan.

# Hardware requirement

## Supported operating systems

Brother iPrint&Scan is compatible with devices running Android™ 2.1 or greater.

**Note**

Certain features of Brother iPrint&Scan may not be supported by your mobile device.

 
## Network settings

In order to use Brother iPrint&Scan, your mobile device must connect using Wi-Fi to the network that your Brother machine is connected to. Brother iPrint&Scan supports wireless connections that use infrastructure mode; ad-hoc mode is not supported.

To configure your mobile device for a Wi-Fi connection, please refer to your mobile device's user's guide.


To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup Guide.

- When the Brother machine is connected to the wireless access point/router using Wi-Fi:

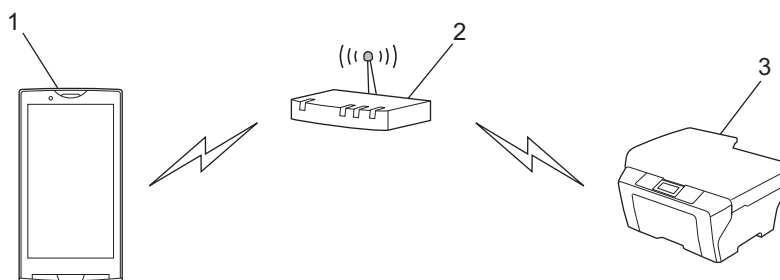

- 1 Mobile device
- 2 Wireless access point/router
- 3 Wireless network machine (your machine)

 - When the Brother machine is connected to the wireless access point/router using a network cable:

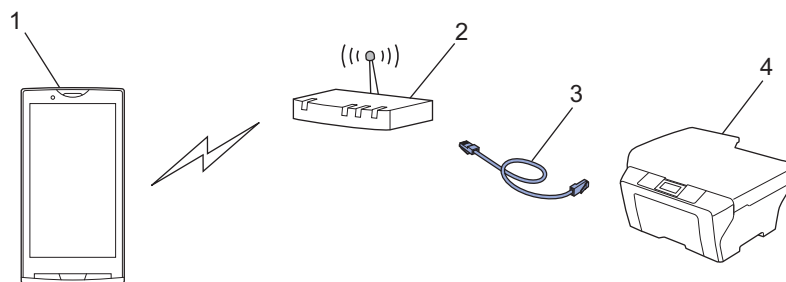

- 1 Mobile device**
- 2 Wireless access point/router**
- 3 Network cable**
- 4 Network machine (your machine)**

## Downloading Brother iPrint&Scan from the Android™ Market

1

You can download and install Brother iPrint&Scan from the Android™ Market. To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

To download and install or uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device.

## Printing from the mobile device's memory card

### Printing photos

 
You can print JPEG images that are saved on your mobile device's memory card.

- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Open the Launcher on the mobile device.
- 3 Tap the Brother iPrint&Scan icon.

**Note**

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 4 Tap **Photo Print**.
- 5 Thumbnail photos are displayed. Tap the desired photo.
- 6 Confirm the image on the print preview screen.

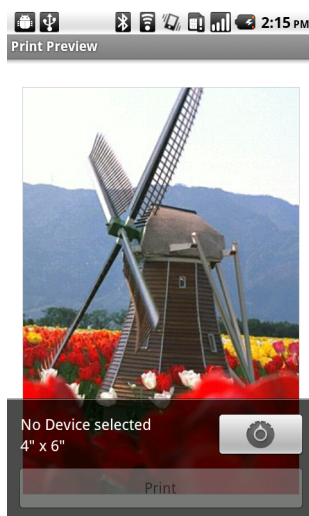
**Note**

Tap the screen to hide or show the operation buttons.

- 7 Tap

- 8 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 10.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 9.

 2

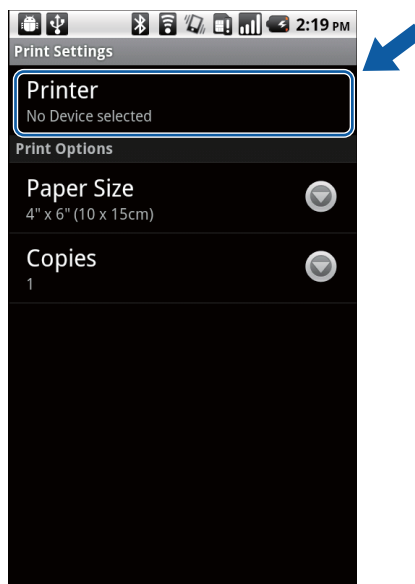

- 9 The application will search your network and display a list of available machines. Tap your machine from the list.
- 10 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 11.
  - If you do not want to change any settings, press the Back button and go to step 11.
- 11 Tap **Print**.  
The machine will start printing.

## Printing PDF files

You can print PDF files saved on your mobile device's memory card. Secure PDF files cannot be printed.



### Note

- Some encrypted PDF files cannot be printed.
- When printing a PDF file that uses fonts that are not embedded in the file, characters may be replaced with characters of a different font, or may be garbled.
- When printing a PDF that includes transparent objects, the transparency setting will be ignored and the file will be printed with that setting off.

 
- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Open the Launcher on the mobile device.
- 3 Tap the Brother iPrint&Scan icon.



### Note

When the license agreement screen appears, carefully read and accept the terms of the agreement.

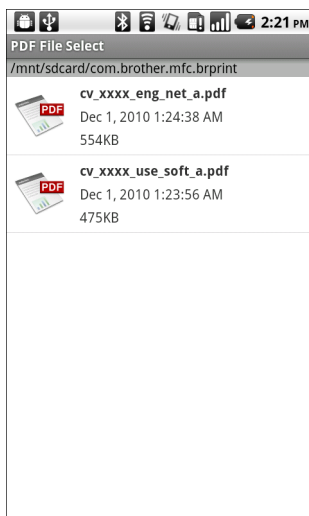

- 4 Tap **PDF Print**.  
The PDF file list is displayed.



- 5 Tap the name of the file that you want to print.
- 6 Confirm the image on the print preview screen.



### Note

 
- Tap the screen to hide or show the operation buttons.
- You can view different pages in a multi-page PDF by tapping  or .



7 Tap .

8 Make sure your machine is selected.  
Do one of the following:

- If your machine is selected, go to step 10.
- If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 9.

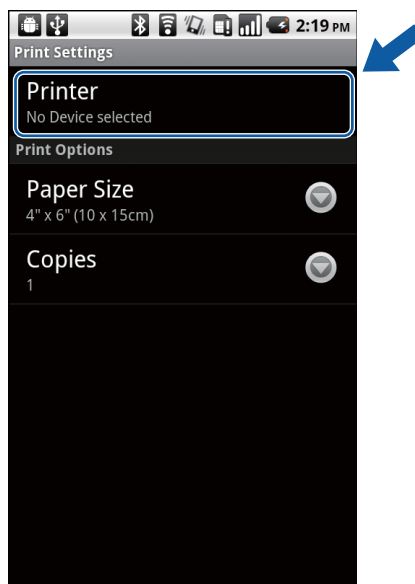

9 The application will search your network and display a list of available machines. Tap your machine from the list.

10 Do one of the following:

- If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 11.
- If you do not want to change any settings, press the Back button and go to step 11.

11 Do one of the following:

- Tap **Print this** to print the displayed page.
- Tap **Print all** to print all pages of the PDF.

The machine will start printing.

# Printing from a web browser

## Printing web pages

You can print web pages using the web browser that is installed in Brother iPrint&Scan.

 
- 1 Open the Launcher on the mobile device.
- 2 Tap the Brother iPrint&Scan icon.



### Note

When the license agreement screen appears, carefully read and accept the terms of the agreement.


- 3 Tap **Web Page Print**.
- 4 The web browser is displayed.

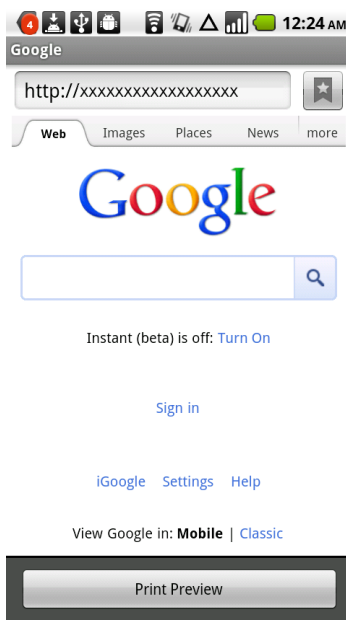

You can view a web page using one of the following methods:


#### ■ Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap  next to the address field, and then go to step 5.

#### ■ Search for keywords

Tap the address field, and then enter the keywords that you want to search for.

Tap  next to the address field.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step 5.

- Tap a bookmark

Tap .

Tap the bookmark of the web page that you want to view, and then go to step 5.

- Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.



Go to step 5.

- 5 The web page is displayed.  
Tap **Print Preview**.

- 6 Confirm the image on the print preview screen.

 


#### Note

- Tap the screen to hide or show the operation buttons.
- You can view different pages by tapping  or .

- 7 Tap .


- 8 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 10.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 9.

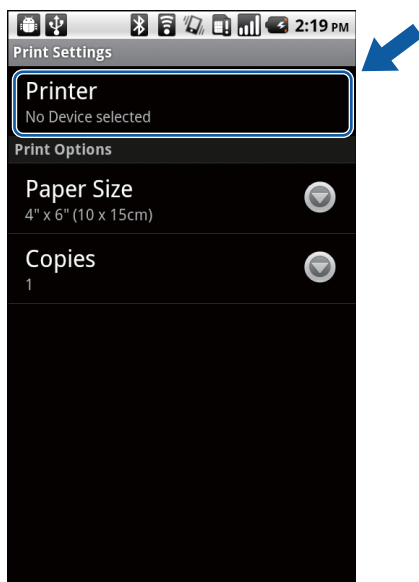

- 9 The application will search your network and display a list of available machines. Tap your machine from the list.
- 10 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 11.
  - If you do not want to change any settings, press the Back button and go to step 11.
- 11 Tap **Print**.  
The machine will start printing.

### Deleting the browsing history

You can delete the browsing history.

- 1 Tap .
- 2 Tap **History**.
- 3 Do one of the following:
  - If you want to delete a browsing history, touch the record and hold it until the pop-up screen appears. A message will appear to confirm if you want to delete the browsing history. Tap **OK**.  
The browsing history will be cleared.
  - If you want to delete all of the browsing history, press the Menu button, and then tap **Clear history**. A message will appear to confirm if you want to delete the browsing history. Tap **OK**.  
All of the browsing history will be cleared.



#### Note

If you delete the browsing history, it is not available when using other web browsers.

## Printing from other applications

Documents can also be printed directly from other applications installed on your mobile device using Brother iPrint&Scan. For example, you can print photos that are attached to E-mail messages from your mobile device.

### Printing photos

---

You can print JPEG/PNG/GIF/BMP images from other applications.

- 1 Use the desired application to select the photo that you want to print, and share the photo with Brother iPrint&Scan. For example, in some applications you can share a photo by tapping the share icon (🔗). If the list of applications appears, select Brother iPrint&Scan.  
A print preview will be displayed.



**Note**

When the license agreement screen appears, carefully read and accept the terms of the agreement.

---

- 2 Confirm the image on the print preview screen.

 
**Note**

- Tap the screen to hide or show the operation buttons.
  - If multiple photos are selected, tap  or  to view a different photo.
- 

- 3 Tap .

- 4 Make sure your machine is selected.  
Do one of the following:
- If your machine is selected, go to step 6.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 5.

2

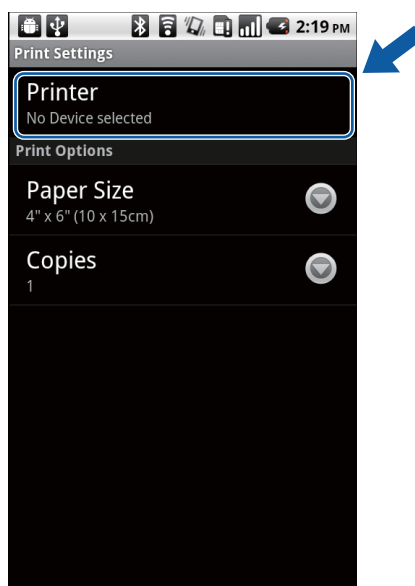

- 5 The application will search your network and display a list of available machines. Tap your machine from the list.
- 6 Do one of the following:
- If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 7.
  - If you do not want to change any settings, press the Back button and go to step 7.
- 7 Tap **Print**.  
The machine will start printing.

## Printing PDF files



### Note

- Some encrypted PDF files cannot be printed.
- When printing a PDF file that uses fonts that are not embedded in the file, characters may be replaced with characters of a different font, or may be garbled.
- When printing a PDF that includes transparent objects, the transparency setting will be ignored and the file will be printed with that setting off.

- 1 Use the desired application to select the PDF file that you want to print, and share the file with Brother iPrint&Scan. For example, in some applications you can share the file by tapping the share icon (🔗). If the list of applications appears, select Brother iPrint&Scan.  
A print preview will be displayed.



#### Note

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 Confirm the image on the print preview screen.



#### Note

 
- Tap the screen to hide or show the operation buttons.
- You can view different pages in a multi-page PDF by tapping < or >.

- 3 Tap

- 4 Make sure your machine is selected.

Do one of the following:

- If your machine is selected, go to step 6.
- If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 5.

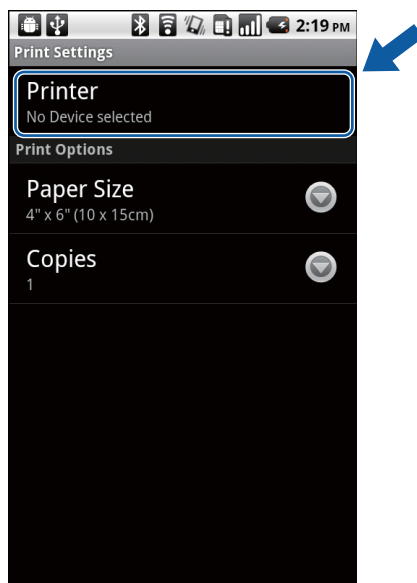

- 5 The application will search your network and display a list of available machines. Tap your machine from the list.

- 6 Do one of the following:
- If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 7.
  - If you do not want to change any settings, press the Back button and go to step 7.
- 7 Do one of the following:
- Tap **Print this** to print the displayed page.
  - Tap **Print all** to print all pages of the PDF.
- The machine will start printing.

## Printing text files

You can print text (\*.txt) files from text viewer applications.

- 1 Use the desired application to select the text file that you want to print, and share the file with Brother iPrint&Scan. For example, in some applications you can share the file by tapping the share icon (📎). If the list of applications appears, select Brother iPrint&Scan. A print preview will be displayed.



### Note

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 Confirm the image on the print preview screen.



 
### Note

- Tap the screen to hide or show the operation buttons.
- You can view different pages by tapping < or >.

- 3 Tap .



- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 5.

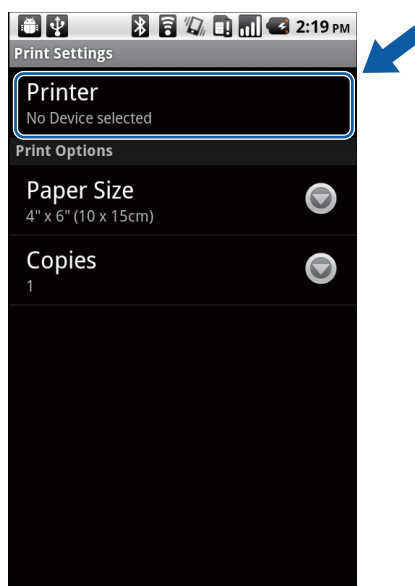

- 5 The application will search your network and display a list of available machines. Tap your machine from the list.
- 6 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 7.
  - If you do not want to change any settings, press the Back button and go to step 7.
- 7 Tap **Print**.  
The machine will start printing.

## Printing web pages

You can print web pages from other web browsers.

- 1 Use the desired web browser to select the web page that you want to print, and share the page with Brother iPrint&Scan. For example, in some applications you can share the page by pressing the Menu button, and then tap **More**, **Share page**. If the list of applications appears, select Brother iPrint&Scan. The web page is displayed.



### Note


When the license agreement screen appears, carefully read and accept the terms of the agreement.

 
- 2 Tap **Print Preview**.  
A print preview will be displayed.
- 3 Confirm the image on the print preview screen.



**Note**

- Tap the screen to hide or show the operation buttons.
- You can view different pages by tapping < or >.

- 4 Tap .
- 5 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 7.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 6.

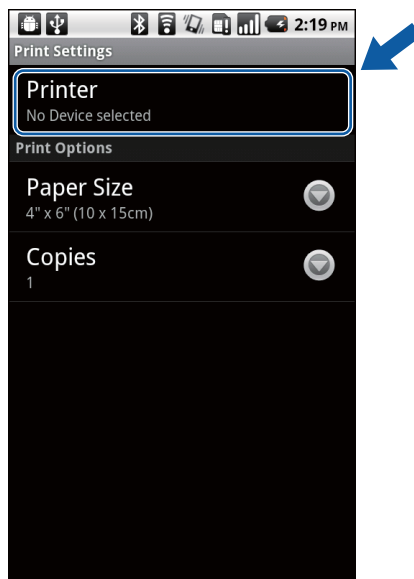

- 6 The application will search your network and display a list of available machines. Tap your machine from the list.
- 7 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 19. After changing the settings, go to step 8.
  - If you do not want to change any settings, press the Back button and go to step 8.
- 8 Tap **Print**.  
The machine will start printing.

## Print Settings

You can change the following print settings when you print from a mobile device.

- Paper Size
- Media Type <sup>1</sup>
- Copies
- Layout <sup>2 3 4</sup>
- Color/Mono <sup>2 4</sup>
- Duplex (2sided) <sup>2 3 4</sup>

<sup>1</sup> Displayed only when printing photos.

<sup>2</sup> Displayed only when printing PDF files.

<sup>3</sup> Displayed only when printing text files.

<sup>4</sup> Displayed only when printing web pages.



### Note

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option.  
Repeat steps 1 and 2 if you want to change other options.
- 3 Press the Back button.



### Note

- When you print photos  
(Inkjet models)

Photos are printed borderless, and if the aspect ratios of the photos and the paper are different, the photos will be enlarged so that there is no margin on the printed photos. In this case, the portion of the photo that extends beyond the paper size is cut off and will not be printed.

(Laser models)

Photos are printed with borders, and if the aspect ratios of the photos and the paper are different, the photos will be reduced or enlarged so that the entire image is printed.

- When you print PDF files

PDF pages are printed with borders, and if the aspect ratios of the pages and the paper are different, the pages will be reduced or enlarged so that the entire page is printed.

- When you print text files

Text is printed with borders.

- When you print web pages

Web pages are printed with borders and will be reduced or enlarged according to the width of the paper. If the web pages are longer than the sheet length of the paper, the web pages will be printed on multiple sheets of paper.

---

## Scanning documents

### Scanning directly to your mobile device's memory card


3

 
Make sure there is enough available space on your mobile device's memory card.

- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Load your document on to your machine.
- 3 Open the Launcher on the mobile device.
- 4 Tap the Brother iPrint&Scan icon.

**Note**

When the license agreement screen appears, carefully read and accept the terms of the agreement.

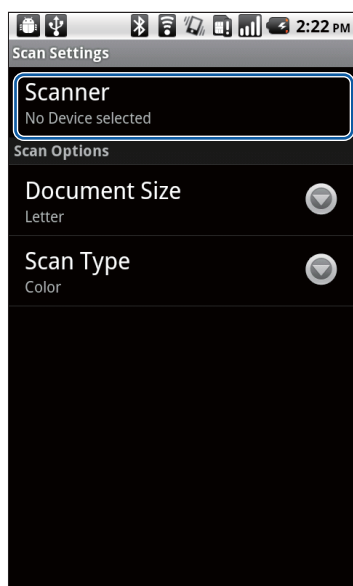

- 5 Tap **Scan**.
- 6 Tap .
- 7 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 9.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Scanner**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine from the list.
- 9 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 27. After changing the settings, go to step 10.
  - If you do not want to change any settings, press the Back button and go to step 10.
- 10 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by tapping < or >.

- 11 Do one of the following:
  - If you want to crop the scanned image, tap  and then go to step 12.
  - If you do not want to crop the scanned image, go to step 14.
- 12 The area inside the box will be cropped.
  - To change the size of the box, drag the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
 When finished, tap **Done**.
- 13 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 12.

- 14 Tap **Save**.
- 15 Choose the file format (JPEG or PDF) used for the saved file.  
The scanned image will be saved on the memory card in the specified file format.

**Note**

- If you chose “JPEG”, each page is saved as a separate file. If you chose “PDF”, all pages of the document are saved in one file.
- File names are automatically created based on the current date and time. For example, the first image scanned at 10:33 PM and 55 seconds on July 1, 2011 would be named Scan07012011223355\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)
- Scanned images are saved in the following folder on the memory card: /sdcard/Brother/scan.

## Opening scanned images in other applications

Photos and documents scanned with your Brother machine can be opened with other applications. For example, if an E-mail application that supports JPEG and PDF files is installed on your mobile device, scanned images can be attached to outgoing E-mail messages and sent using your mobile device by selecting the E-mail application.

 
- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Load your document on to your machine.
- 3 Open the Launcher on the mobile device.
- 4 Tap the Brother iPrint&Scan icon.

**Note**

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 5 Tap **Scan**.
- 6 Tap .

- 7 Make sure your machine is selected.  
Do one of the following:
- If your machine is selected, go to step 9.
  - If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on and then tap **Scanner**. Go to step 8.

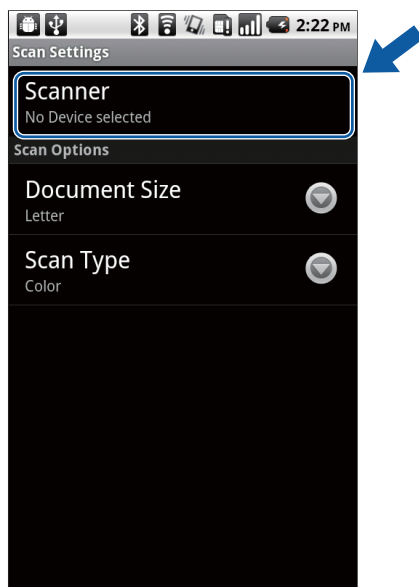






- 8 The application will search your network and display a list of available machines. Tap your machine from the list.
- 9 Do one of the following:
- If you want to change other scan settings, see *Scan Settings* >> page 27. After changing the settings, go to step 10.
  - If you do not want to change any settings, press the Back button and go to step 10.



- 10 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by tapping  or .

- 11 Do one of the following:
- If you want to crop the scanned image, tap  and then go to step 12.
  - If you do not want to crop the scanned image, go to step 14.
- 12 The area inside the box will be cropped.
- To change the size of the box, drag the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
- When finished, tap **Done**.
- 13 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 12.
- 14 Tap .
- 15 Choose the file format (JPEG or PDF) of the file that you want to open. A list of applications that can open the file is displayed.
- 16 Tap the desired application.  
For information about operating the application, refer to the application's user's guide.



**Note**

File names are automatically created based on the current date and time. For example, the first image scanned at 10:33 PM and 55 seconds on July 1, 2011 would be named Scan07012011223355\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

## Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type
- Duplex <sup>1</sup>

<sup>1</sup> Displayed only when your machine supports duplex scan.



### Note

Only settings that can be changed are displayed.

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option.  
Repeat steps 1 and 2 if you want to change other options.
- 3 Press the Back button.



# For iOS Devices

---

Introduction	29
Printing	33
Scanning	59

## Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your iPhone, iPod touch, and iPad.

Brother iPrint&Scan supports the following functions:

### ■ Printing

Even if your machine is not connected to your computer, you can print photos, PDF files or text and web pages directly from your mobile device. (See *Printing* ►► page 33.)

### ■ Scanning

Photos and documents scanned with your Brother machine can be saved directly to the photo album of your mobile device, attached to outgoing E-mail messages in your mobile device, saved directly to iCloud, or opened with other applications in your mobile device. (See *Scanning* ►► page 59.)



### Note

- For a list of models supported by Brother iPrint&Scan please visit the Brother web site at <http://www.brother.com/apps/iphone/>.
- If your machine does not have a scanner, you cannot use the scan functions of Brother iPrint&Scan.

# Hardware requirement

## Supported devices and operating systems

Brother iPrint&Scan is compatible with the following iOS devices:

- iPhone (iOS 4.0 or greater)
- iPod touch (iOS 4.0 or greater)
- iPad (iOS 4.2 or greater)

**Note**

Certain features of Brother iPrint&Scan may not be supported by your mobile device.

## Network settings

 
In order to use Brother iPrint&Scan, your mobile device must connect using Wi-Fi to the network that your Brother machine is connected to. Brother iPrint&Scan supports wireless connections that use infrastructure mode or ad-hoc mode.

To configure your mobile device for a Wi-Fi connection, please refer to your mobile device's user's guide. A link to your mobile device's user's guide, which can be viewed on the Apple web site, can be found in the Bookmarks folder of Safari by default.

To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup and Network User's Guide.

### Ad-hoc mode

Connect your mobile device to your machine without a wireless access point/router.

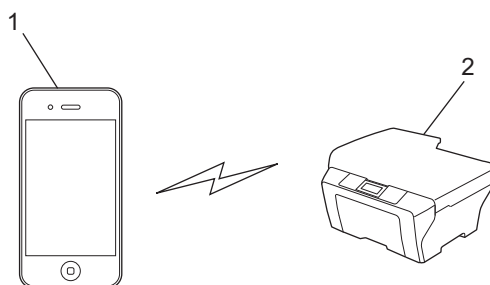


**1 Mobile device**

**2 Wireless network machine (your machine)**

## Infrastructure mode

Connect your mobile device to your machine through a wireless access point/router.

 - When the Brother machine is connected to the wireless access point/router using Wi-Fi:

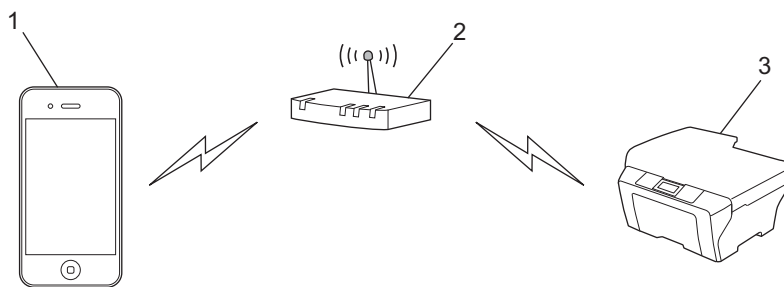


**1 Mobile device**

**2 Wireless access point/router**

**3 Wireless network machine (your machine)**

 - When the Brother machine is connected to the wireless access point/router using a network cable:

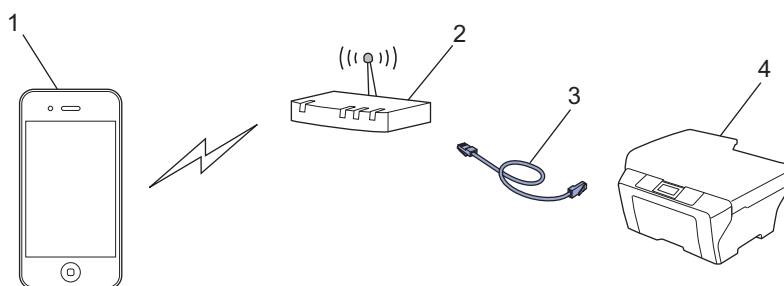

**1 Mobile device**

**2 Wireless access point/router**

**3 Network cable**

**4 Network machine (your machine)**

## Downloading Brother iPrint&Scan from the App Store

You can download and install Brother iPrint&Scan from the App Store. To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

To download and install or uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device. A link to your mobile device's user's guide, which can be viewed on the Apple web site, can be found in the Bookmarks folder of Safari by default.



## Printing photos from your mobile device's photo album

You can print photos that are stored in your mobile device's photo album.

### For iPhone and iPod touch

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
- 2 Tap **Print from Photo Albums**.
- 3 Choose the photo album from the list.  
Thumbnails of the photos in the selected album are displayed.
- 4 Tap the desired photo.
- 5 Confirm the image on the print preview screen.

(iPhone)



#### Note

Tap the screen to hide or show the operation buttons.

- 6 Tap .  
The Print Settings screen appears.

- 7 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 9.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.

(iPhone)



- 8 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 9 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 10.
  - If you do not want to change any settings, tap **Done** and then go to step 10.
- 10 Tap **Print**.  
The machine will start printing.

## For iPad

- 1 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Web**, **Clipboard** or **Scan** screen is displayed, switch to the photo print function by tapping **Photo**.
- 2 Tap **Photo Albums**.
- 3 Choose a photo album from the list.  
Thumbnails of the photos in the selected album are displayed.
- 4 Tap the desired photo.

- 5 Confirm the image on the print preview screen.




- 6 Tap **Settings**.  
The Print Settings screen appears.
- 7 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 9.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 9 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 10.
  - If you do not want to change any settings, tap outside of the Print Settings screen to close the screen, and then go to step 10.
- 10 Tap **Print**.  
The machine will start printing.

## Printing photos taken with Brother iPrint&Scan

When using the built-in camera in your iPhone or iPod touch, photos can be taken using Brother iPrint&Scan and printed directly.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
- 2 Tap **Print from Camera**.
- 3 Take a photo by tapping .
- 4 The photo is displayed.  
Do one of the following:
  - To print the photo, tap **Use**, and then go to step 5.
  - To retake the photo, tap **Retake**, and then go back to step 3.



### Note

The photo is automatically added to the mobile device's photo album.

- 5 Confirm the image on the print preview screen.

(iPhone)



### Note

Tap the screen to hide or show the operation buttons.

- 6 Tap .
- The Print Settings screen appears.

- 7 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 9.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.

(iPhone)



- 8 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 9 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 10.
  - If you do not want to change any settings, tap **Done** and then go to step 10.
- 10 Tap **Print**.  
The machine will start printing.

# Printing from a web browser

## For iPhone and iPod touch

### Printing web pages

You can directly print web pages using the web browser that is installed in Brother iPrint&Scan.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
- 2 Tap **Print from Web Page**.
- 3 The web browser is displayed.

(iPhone)



You can view a web page using one of the following methods:

■ Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap **Go**, and then go to step 4.

■ Search for a keyword

Tap

The search screen will appear.


In the search field, enter the keywords that you want to search for.

Tap **Search**.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step 4.

■ Tap a bookmark

If you have already added a bookmark to the web page, tap .

Tap the bookmark of the web page that you want to view, and then go to step ④.

■ Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.

Go to step ④.



**Note**

The bookmarks and browsing history of other web browsers on your mobile device are not available.

④

The web page is displayed.

Tap **Print Preview**.



**Note**

If you want to add a bookmark to the web page, see *Adding a bookmark to a web page* >> page 42.

Do one of the following:

- If the web page will be printed on multiple sheets of paper, go to step ⑤.
- If the web page will be printed on a single sheet of paper, go to step ⑦.

⑤



A thumbnail preview of the web page is displayed.

Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.

(iPhone)



**Note**

- Tap **Select All** or **Deselect All** to select or deselect all pages.
- You can enlarge the thumbnails by tapping , and reduce by tapping .



- 6 Tap **Done**.
- 7 Confirm the image on the print preview screen.



**Note**

- Tap the screen to hide or show the operation buttons.
- You can view different pages in a multi-page web page by flicking left or right.

8

Tap .

The Print Settings screen appears.

9

Make sure your machine is selected.

Do one of the following:

- If your machine is selected, go to step 11.
- If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 10.

(iPhone)



10

The application will search your network and display a list of available machines. Tap your machine from the list.

Tap **Print Settings**.

11

Do one of the following:

- If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 12.
- If you do not want to change any settings, tap **Done** and then go to step 12.


12

Tap **Print**.

 
The machine will start printing.

## Adding a bookmark to a web page

If you add a bookmark to your favorite web page, you can access the web page simply by tapping the bookmark.

- 1 When the web page that you want to add a bookmark to is displayed, tap .
- 2 Tap **Save**.

(iPhone)

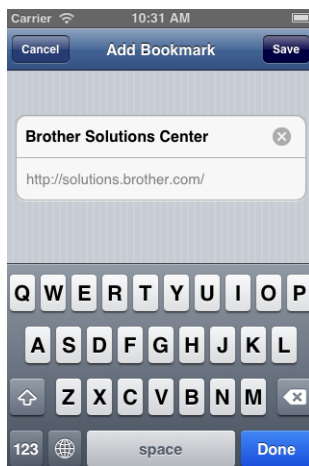



### Note

You can change the title. However, the bookmark title cannot be blank.

## Editing bookmarks

You can edit the bookmarks.

- 1 Tap .
- 2 Tap **Edit**.
- 3 Do one of the following:
  - If you want to delete a bookmark, tap  on the left side of the title, and then tap **Delete** on the right side of the title.
 Go to step 4.



### Note

If you tap  again before tapping **Delete**, the **Delete** icon will be hidden.

- If you want to edit the title, tap it, and then edit the title.  
Tap **Save**, and then go to step ④.

### (iPhone)



- ④ Repeat step ③ if you want to edit other bookmarks.  
Tap **Done**.


## Deleting all of the browsing history

You can delete all of the browsing history.



### Note

When deleting all of the browsing history, you cannot select and delete a single browsing history.

 
- ① Tap .
- ② Tap **History**.
- ③ Tap **Clear**. A message will appear to confirm if you want to delete the browsing history. Tap **Clear History**.  
All of the browsing history will be cleared.

## For iPad

### Printing web pages

You can directly print web pages using the web browser that is installed in Brother iPrint&Scan.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Clipboard** or **Scan** screen is displayed, switch to the web print function by tapping **Web**.
- 2 The web browser is displayed.

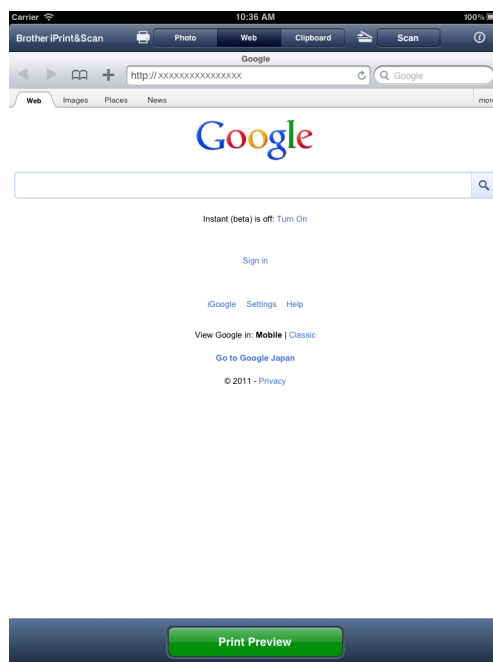

You can view a web page using one of the following methods:

- Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap **Go**, and then go to step ③.

- Search for a keyword

Tap


In the search field, enter the keywords that you want to search for.

Tap **Search**.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step ③.

- Tap a bookmark

If you have already added a bookmark to the web page, tap .

Tap the bookmark of the web page that you want to view, and then go to step ③.

- Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.

Go to step ③.



#### Note

The bookmarks and browsing history of other web browsers on your mobile device are not available.

③

The web page is displayed.

Tap **Print Preview**.



#### Note

 
If you want to add a bookmark to the web page, see *Adding a bookmark to a web page* >> page 46.

④

Confirm the image on the print preview screen.

Thumbnail previews of each page are displayed in the top of the screen. To view a page, tap its thumbnail.

Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.

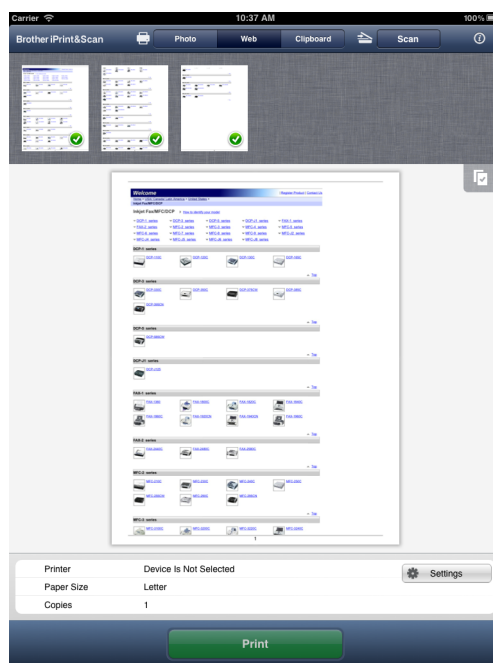

#### Note

Tap  and then **Select All** or **Deselect All** to select or deselect all pages.

⑤

Tap **Settings**.

The Print Settings screen appears.


- 6 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 8.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 7.



 
- 7 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 8 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 9.
  - If you do not want to change any settings, tap outside of the Print Settings screen to close the screen, and then go to step 9.
- 9 Tap **Print**.  
The machine will start printing.

## Adding a bookmark to a web page

If you add a bookmark to your favorite web page, you can access the web page simply by tapping the bookmark.

- 1 When the web page that you want to add a bookmark to is displayed, tap .

## 2 Tap **Save**.

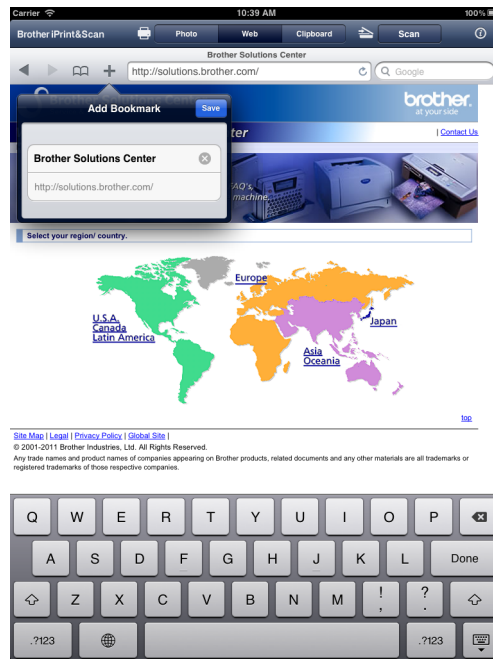



### Note

You can change the title. However, the bookmark title cannot be blank.

## Editing bookmarks

You can edit the bookmarks.

- 1 Tap .
- 2 Tap **Edit**.
- 3 Do one of the following:

- If you want to delete a bookmark, tap  on the left side of the title, and then tap **Delete** on the right side of the title.

Go to step 4.



### Note

If you tap  again before tapping **Delete**, the **Delete** icon will be hidden.

- If you want to edit the title, tap it, and then edit the title.  
Tap **Save**, and then go to step ④.



- ④ Repeat step ③ if you want to edit other bookmarks.  
Tap **Done**.


## Deleting all of the browsing history

You can delete all of the browsing history.



### Note

When deleting all of the browsing history, you cannot select and delete a single browsing history.

- ① Tap .
- ② Tap **History**.
- ③ Tap **Clear**. A message will appear to confirm if you want to delete the browsing history. Tap **Clear History**.  
All of the browsing history will be cleared.



## Printing data from the Clipboard

You can directly print data, such as photos, text, and selected portions of web pages, that is copied to the Clipboard by other applications.



### For iPhone and iPod touch

- 1 Use the desired application to copy the data to the Clipboard.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
- 3 Tap **Print from Clipboard**.  
The data in the Clipboard will be loaded.  
Do one of the following:
  - If you want to print photos, go to step 5 in *For iPhone and iPod touch* >> page 33.
  - If you want to print text or a selected portion of a web page that will be printed on multiple sheets of paper, go to step 4.
  - If you want to print text or a selected portion of a web page that will be printed on a single sheet of paper, go to step 6.
- 4 A thumbnail preview of the text or web page is displayed.  
Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.

(iPhone)



#### Note

- Tap **Select All** or **Deselect All** to select or deselect all pages.
- You can enlarge the thumbnails by tapping , and reduce by tapping .

- 5 Tap **Done**.

- 6 Confirm the image on the print preview screen.



**Note**

- Tap the screen to hide or show the operation buttons.
- You can view different pages in multi-page text or web pages by flicking left or right.

- 7 Tap .

The Print Settings screen appears.

- 8 Make sure your machine is selected.  
Do one of the following:

- If your machine is selected, go to step 10.
- If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 9.

 
(iPhone)



- 9 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 10 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 11.
  - If you do not want to change any settings, tap **Done** and then go to step 11.
- 11 Tap **Print**.  
The machine will start printing.

## For iPad

- 1 Use the desired application to copy the data to the Clipboard.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Web** or **Scan** screen is displayed, switch to the Clipboard print function by tapping **Clipboard**.  
The data in the Clipboard will be loaded.  
Do one of the following:
  - If you want to print photos, go to step 5 in *For iPad* >> page 34.
  - If you want to print text or a selected portion of a web page, go to step 3.
- 3 Confirm the image on the print preview screen.  
Thumbnail previews of each page are displayed in the top of the screen. To view a page, tap its thumbnail.  
Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.

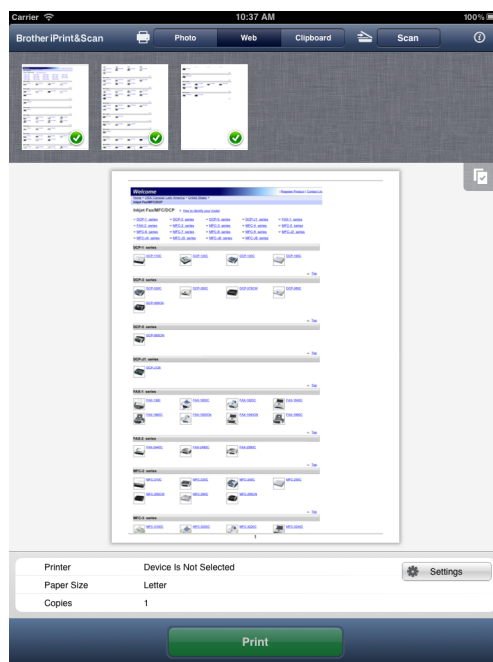

### Note

Tap  and then **Select All** or **Deselect All** to select or deselect all pages.

- 4 Tap **Settings**.  
The Print Settings screen appears.

- 5 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 7.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 6.



- 6 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 7 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 8.
  - If you do not want to change any settings, tap outside of the Print Settings screen to close the screen, and then go to step 8.
- 8 Tap **Print**.  
The machine will start printing.

## Printing PDF files from other applications

PDF files can be printed directly from other applications installed on the mobile device using Brother iPrint&Scan.



### For iPhone and iPod touch

- 1 Use the desired application to select the PDF that you want to print, and open it in Brother iPrint&Scan. For example, if you are viewing a PDF using Safari, tap **Open in...** and then select Brother iPrint&Scan from the application list.
- 2 A thumbnail preview of the PDF is displayed.  
Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.

(iPhone)



#### Note

- Tap **Select All** or **Deselect All** to select or deselect all pages.
- You can enlarge the thumbnails by tapping , and reduce by tapping .
- Secure PDF files that are configured to not allow printing cannot be printed. If a password-protected PDF file is opened, enter the password when prompted and tap **OK**.

- 3 Tap **Done**.

- 4 Confirm the image on the print preview screen.



#### Note

- Tap the screen to hide or show the operation buttons.
- You can view different pages in a multi-page PDF by flicking left or right.

5 Tap .

The Print Settings screen appears.

6 Make sure your machine is selected.

Do one of the following:

- If your machine is selected, go to step 8.
- If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 7.

(iPhone)



7 The application will search your network and display a list of available machines. Tap your machine from the list.

Tap **Print Settings**.

8 Do one of the following:

- If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 9.
- If you do not want to change any settings, tap **Done** and then go to step 9.

9 Tap **Print**.


The machine will start printing.

## For iPad

- 1 Use the desired application to select the PDF that you want to print, and open it in Brother iPrint&Scan. For example, if you are viewing a PDF using Safari, tap **Open in...** and then select Brother iPrint&Scan from the application list.
- 2 Confirm the image on the print preview screen.  
Thumbnail previews of each page are displayed in the top of the screen. To view a page, tap its thumbnail.  
Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.



### Note

- Tap  and then **Select All** or **Deselect All** to select or deselect all pages.
- Secure PDF files that are configured to not allow printing cannot be printed. If a password-protected PDF file is opened, enter the password when prompted and tap **OK**.

- 3 Tap **Settings**.  
The Print Settings screen appears.

- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 5.



- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Print Settings**.
- 6 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 57. After changing the settings, go to step 7.
  - If you do not want to change any settings, tap outside of the Print Settings screen to close the screen, and then go to step 7.
- 7 Tap **Print**.  
The machine will start printing.



## Print Settings

You can change the following print settings when you print from a mobile device.

- Paper Size
- Media Type <sup>1</sup>
- Copies
- Layout <sup>2 3 4</sup>
- Color/Mono <sup>2 4</sup>
- Duplex <sup>2 3 4</sup>

<sup>1</sup> Displayed only when printing photos.

<sup>2</sup> Displayed only when printing PDF files.

<sup>3</sup> Displayed only when printing text.

<sup>4</sup> Displayed only when printing web pages.



### Note

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option and tap **Print Settings**.  
Repeat steps 1 and 2 if you want to change other options.
- 3 (For iPhone and iPod touch)  
Tap **Done**.  
(For iPad)  
Tap outside of the Print Settings screen to close the screen.



### Note

- When you print photos

(Inkjet models)

Photos are printed borderless, and if the aspect ratios of the photos and the paper are different, the photos will be enlarged so that there is no margin on the printed photos. In this case, the portion of the photo that extends beyond the paper size is cut off and will not be printed.

(Laser models)

Photos are printed with borders, and if the aspect ratios of the photos and the paper are different, the photos will be reduced or enlarged so that the entire image is printed.

- When you print PDF files

PDF pages are printed with borders, and if the aspect ratios of the pages and the paper are different, the pages will be reduced or enlarged so that the entire page is printed.

- When you print text

Text is printed with borders and will be reduced or enlarged according to the width of the paper. If the text pages are longer than the sheet length of the paper, the text pages will be printed on multiple sheets of paper.

- When you print web pages

Web pages are printed with borders and will be reduced or enlarged according to the width of the paper. If the web pages are longer than the sheet length of the paper, the web pages will be printed on multiple sheets of paper.

---

## Scanning documents

### Scanning documents and saving them in your mobile device's photo album

Make sure there is enough available space on your mobile device.

#### For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
- 3 Tap **Scan**.  
The Scan Settings screen will appear.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

(iPhone)



- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.


- If you do not want to change any settings, go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

(iPhone)

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Save To Photo Albums**.  
The scanned image is saved in the photo album.

**Note**

Each page is saved as a separate file.

**For iPad**

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Web** or **Clipboard** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.  
The Scan Settings screen appears.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.




- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Save To Photo Albums**.  
The scanned image is saved in the photo album.

**Note**

Each page is saved as a separate file.

## Sending by E-mail

### For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
- 3 Tap **Scan**.  
The Scan Settings screen will appear.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

(iPhone)




- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

(iPhone)

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Email as JPEG** or **Email as PDF**.  
The E-mail application automatically opens, a new outgoing E-mail message is created, and the scanned image is attached to the message.



**Note**

- Images may not be able to be attached to an E-mail message depending on the size of the images or the number of images. If an alert is displayed, you can choose to either continue or to save the scanned images in the mobile device's photo album.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

- 13 Enter the destination, subject, the message content, and then send the message.

**Note**

For information about operating the E-mail application, refer to the application's user's guide.

**For iPad**

 
6

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Web** or **Clipboard** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.  
The Scan Settings screen appears.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.




- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.

- 6 Do one of the following:
- If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.
- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

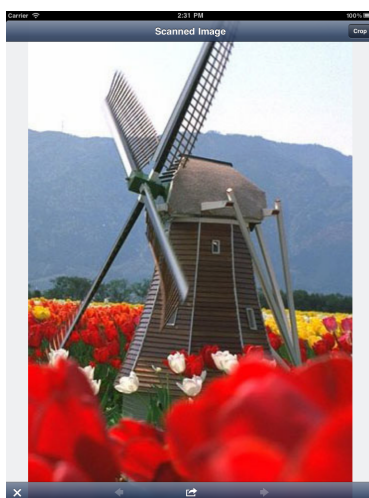**Note**

If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .

**12** Tap **Email as JPEG** or **Email as PDF**.

The E-mail application automatically opens, a new outgoing E-mail message is created, and the scanned image is attached to the message.



**Note**

- Images may not be able to be attached to an E-mail message depending on the size of the images or the number of images. If an alert is displayed, you can choose to either continue or to save the scanned images in the mobile device's photo album.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

**13** Enter the destination, subject, the message content, and then send the message.



**Note**

For information about operating the E-mail application, refer to the application's user's guide.

## Scanning documents and saving them to iCloud


Scanned images can be saved to iCloud and viewed from a computer running Mac OS X 10.7.x. You cannot view the saved image on an iOS device.

iOS 5.0 or greater is required to use this feature. You need to enable iCloud on an iOS device.

### For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
- 3 Tap **Scan**.  
The Scan Settings screen will appear.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

 (iPhone)

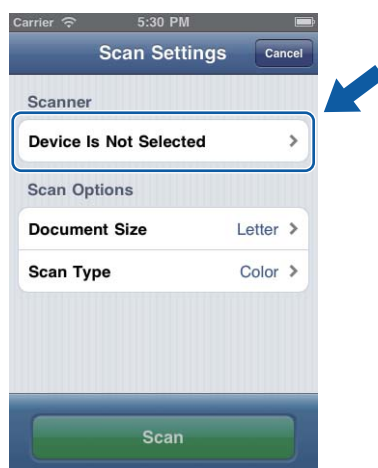


- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

(iPhone)

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Save To iCloud as JPEG** or **Save To iCloud as PDF**.  
The scanned image will be saved to iCloud.

**Note**

- If you chose **Save To iCloud as JPEG**, each page is saved as a separate file. If you chose **Save To iCloud as PDF**, all pages of the document are saved in one file.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

**For iPad**

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Web** or **Clipboard** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.  
The Scan Settings screen appears.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.




- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Save To iCloud as JPEG** or **Save To iCloud as PDF**.  
The scanned image will be saved to iCloud.

**Note**

- If you chose **Save To iCloud as JPEG**, each page is saved as a separate file. If you chose **Save To iCloud as PDF**, all pages of the document are saved in one file.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011\_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

 
## Opening scanned images in other applications

Scanned images can be converted to PDF files and opened using other applications. Make sure an application that can open PDF files is installed on your mobile device.

### For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
- 3 Tap **Scan**.  
The Scan Settings screen will appear.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

#### (iPhone)

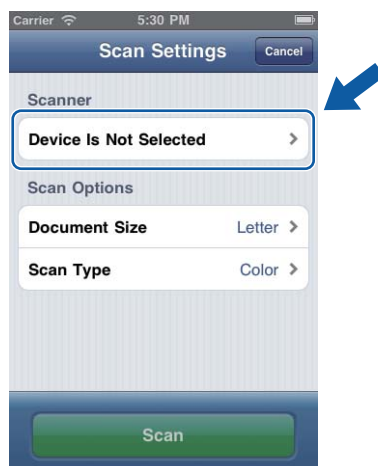

- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, go to step 7.




- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

(iPhone)

**Note**

- Tap the screen to hide or show the operation buttons.
- If the scanned document has multiple pages, you can view different pages by flicking left or right.

 
- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Open Using Another App**.  
A list of applications that can open PDF files is displayed.
- 13 Select an application.  
The PDF file is opened in the selected application.

**Note**

For information about viewing PDF files, refer to the application's user's guide.

**For iPad**

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.  
If the **Photo**, **Web** or **Clipboard** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.  
The Scan Settings screen appears.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 6.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

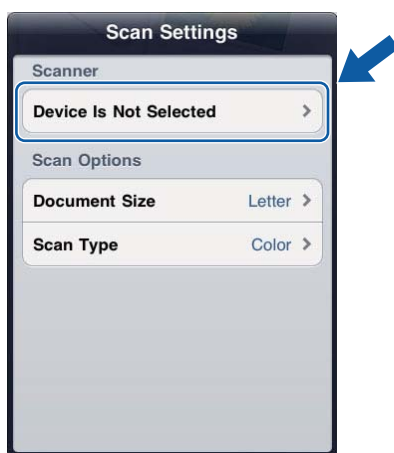


- 5 The application will search your network and display a list of available machines. Tap your machine from the list.  
Tap **Scan Settings**.
- 6 Do one of the following:
  - If you want to change other scan settings, see *Scan Settings* >> page 76. After changing the settings, go to step 7.
  - If you do not want to change any settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.

- 7 Tap **Scan**.  
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 8 Do one of the following:
- If you want to crop the scanned image, tap **Crop** and then go to step 9.
  - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
  - To move the position of the box, tap inside the box and drag the box.
  - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap **Crop** and then go back to step 9.
- 11 Tap .
- 12 Tap **Open Using Another App**.  
A list of applications that can open PDF files is displayed.
- 13 Select an application.  
The PDF file is opened in the selected application.

**Note**

For information about viewing PDF files, refer to the application's user's guide.

## Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type
- Duplex <sup>1</sup>

<sup>1</sup> Displayed only when your machine supports duplex scan.



### Note

Only settings that can be changed are displayed.

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option and tap **Scan Settings**.  
Repeat steps 1 and 2 if you want to change other options.
- 3 (For iPad only)  
Tap outside of the Scan Settings screen to close the screen.



# For Windows<sup>®</sup> Phone Devices

---

<b>Introduction</b>	<b>78</b>
<b>Printing</b>	<b>82</b>
<b>Scanning</b>	<b>89</b>

## Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Windows® Phone, without using a computer.

Brother iPrint&Scan supports the following functions:

■ **Printing**

Even if your machine is not connected to your computer, you can print photos directly from your mobile device. (See *Printing* >> page 82.)

■ **Scanning**

Photos and documents scanned with your Brother machine can be saved directly to your mobile device. (See *Scanning* >> page 89.)



**Note**

- Your machine must support Web Services protocol to use Brother iPrint&Scan functions.
- For a list of models supported by Brother iPrint&Scan please visit the Brother web site at <http://www.brother.com/apps/wp/>.
- If your machine does not have a scanner, you cannot use the scan functions of Brother iPrint&Scan.

## Hardware requirement

### Supported operating systems

---

Brother iPrint&Scan is compatible with devices running Windows® Phone 7 version 7.0 or greater.

**Note**

Certain features of Brother iPrint&Scan may not be supported by your mobile device.

---

### Network settings

 
---

In order to use Brother iPrint&Scan, your mobile device must connect using Wi-Fi to the network that your Brother machine is connected to. Brother iPrint&Scan supports wireless connections that use infrastructure mode; ad-hoc mode is not supported.

To configure your mobile device for a Wi-Fi connection, please refer to your mobile device's user's guide.


To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup Guide.

- When the Brother machine is connected to the wireless access point/router using Wi-Fi:

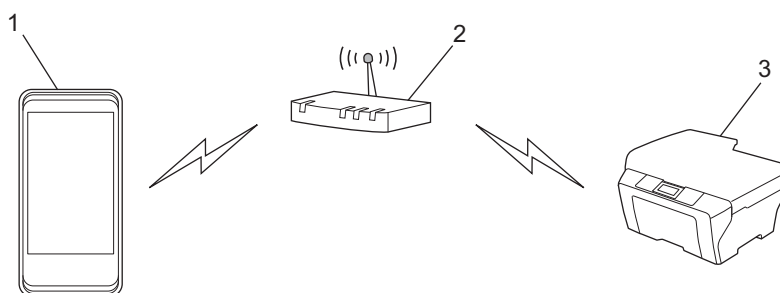

- 1 Mobile device
- 2 Wireless access point/router
- 3 Wireless network machine (your machine)

 - When the Brother machine is connected to the wireless access point/router using a network cable:

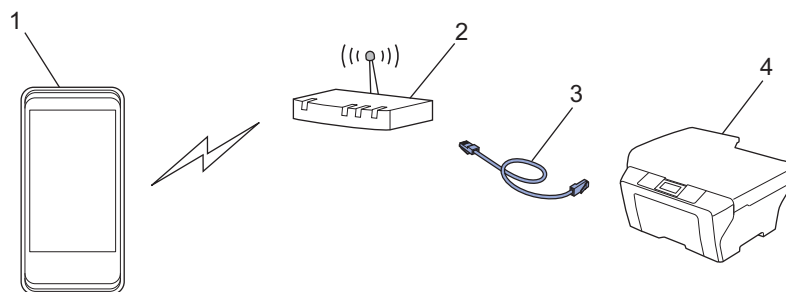

- 1 Mobile device**
- 2 Wireless access point/router**
- 3 Network cable**
- 4 Network machine (your machine)**



## Downloading Brother iPrint&Scan from the Windows<sup>®</sup> Phone Marketplace

You can download and install Brother iPrint&Scan from the Windows<sup>®</sup> Phone Marketplace. To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version. To download and install or to uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device.

## Printing images stored in your mobile device

 
You can print photos that are stored in your mobile device.

- 1 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.


**Note**

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 Tap **Print from Pictures**.
- 3 Choose the desired photo from the thumbnails.
- 4 Confirm the image on the print preview screen.

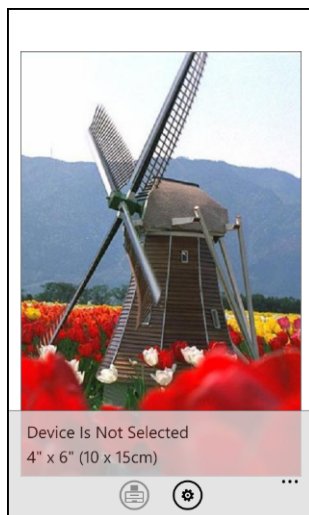**Note**

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.

- 5 Tap .

- 6 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 9.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 7.



- 7 Tap .



**Note**

If the machine was used previously, you can select the machine from the device list.

- 8 Enter your machine's IP address, and then tap **Connect**.  
The machine's model name is displayed when the machine is found. Tap the machine to select it.



**Note**

You can see your machine's IP address in the Network menu on the control panel of your machine. For more details, please refer to your machine's Network User's Guide.

- 9 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 88. After changing the settings, go to step 10.
  - If you do not want to change any settings, press the Back button and go to step 10.

- 10 Tap .

The machine will start printing.

## Printing photos taken with Brother iPrint&Scan

If the mobile device features a camera, photos can be taken using Brother iPrint&Scan and printed directly.

 
- 1 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.
- 2 Tap **Print from Camera**.
- 3 Use the device to take a photo.
- 4 The photo is displayed.  
Do one of the following:
  - To print the photo, tap **accept**, and then go to step 5.
  - To retake the photo, tap **retake**, and then go back to step 3.



### Note

The procedure used to handle a photo may vary by device.

- 5 Confirm the image on the print preview screen.

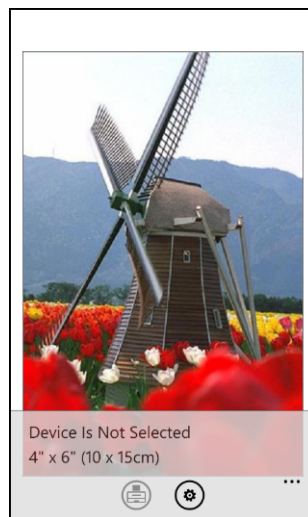


### Note

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.

- 6 Tap .

- 7 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 10.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 8.



- 8 Tap .



**Note**

If the machine was used previously, you can select the machine from the device list.

- 9 Enter your machine's IP address, and then tap **Connect**.  
The machine's model name is displayed when the machine is found. Tap the machine to select it.



**Note**

You can see your machine's IP address in the Network menu on the control panel of your machine. For more details, please refer to your machine's Network User's Guide.

- 10 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 88. After changing the settings, go to step 11.
  - If you do not want to change any settings, press the Back button and go to step 11.

- 11 Tap .

The machine will start printing.

## Printing photos from other applications

Photos can be printed directly from pre-installed applications on your mobile device using Brother iPrint&Scan. For example, you can print photos that are saved in your mobile device's Pictures hub.



### Note

You cannot print photos from third-party applications.

1

Use the desired application to select the photo that you want to print, and share the photo with Brother iPrint&Scan. For example, from the Pictures hub you can share a photo by tapping the sequential dots (...), and then tapping **apps...** If the list of applications appears, select Brother iPrint&Scan. A print preview will be displayed.

 


### Note

- If **apps...** is not displayed though you have already downloaded Brother iPrint&Scan, your Brother iPrint&Scan may be the old version. Download the latest version from the Windows® Phone Marketplace.
- When the license agreement screen appears, carefully read and accept the terms of the agreement.

2


Confirm the image on the print preview screen.

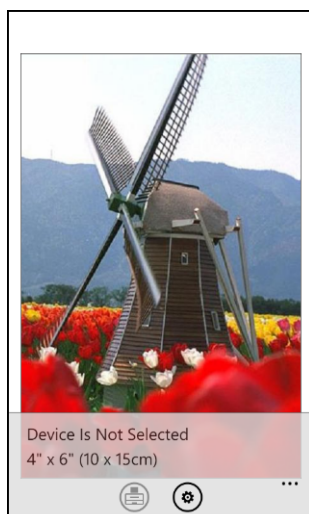

### Note

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.

3

Tap .

- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 7.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 5.



- 5 Tap .



**Note**

If the machine was used previously, you can select the machine from the device list.

- 6 Enter your machine's IP address, and then tap **Connect**.  
The machine's model name is displayed when the machine is found. Tap the machine to select it.



**Note**

You can see your machine's IP address in the Network menu on the control panel of your machine. For more details, please refer to your machine's Network User's Guide.

- 7 Do one of the following:
  - If you want to change other print settings, see *Print Settings* >> page 88. After changing the settings, go to step 8.
  - If you do not want to change any settings, press the Back button and go to step 8.

- 8 Tap .

The machine will start printing.

## Print Settings

You can change the following print settings when you print from a mobile device.

- Paper Size
- Media Type
- Copies



### Note

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option.  
Repeat steps 1 and 2 if you want to change other options.
- 3 Press the Back button.



### Note

When you print photos  
(Inkjet models)

Photos are printed borderless, and if the aspect ratios of the photos and the paper are different, the photos will be enlarged so that there is no margin on the printed photos. In this case, the portion of the photo that extends beyond the paper size is cut off and will not be printed.

(Laser models)

Photos are printed with borders, and if the aspect ratios of the photos and the paper are different, the photos will be reduced or enlarged so that the entire image is printed.



## Scanning documents directly to your mobile device

Make sure there is enough available space on your mobile device.

 
- 1 Load your document on to your machine.
- 2 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.



### Note

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 3 Tap **Scan**.
- 4 Make sure your machine is selected.  
Do one of the following:
  - If your machine is selected, go to step 7.
  - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Scanner**. Go to step 5.

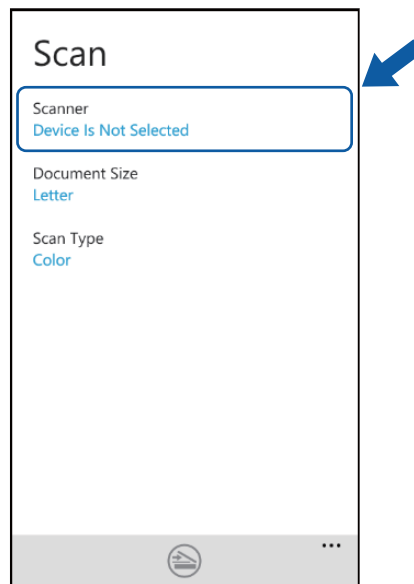

- 5 Tap .



### Note

If the machine was used previously, you can select the machine from the device list.

- 6 Enter your machine's IP address, and then tap **Connect**.  
The machine's model name is displayed when the machine is found. Tap the machine to select it.

**Note**

You can see your machine's IP address in the Network menu on the control panel of your machine. For more details, please refer to your machine's Network User's Guide.

- 7 Do one of the following:
- If you want to change other scan settings, see *Scan Settings* >> page 91. After changing the settings, go to step 8.
  - If you do not want to change any settings, go to step 8.

- 8 Tap .

The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

**Note**

If the scanned document has multiple pages, you can view different pages by flicking left or right.

- 9 Tap .

The scanned image will be saved in **Pictures/Saved Pictures**.

**Note**

Each page is saved as a separate image.

## Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type



### Note

---

Only settings that can be changed are displayed.

---

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option.  
Repeat steps 1 and 2 if you want to change other options.



**Visit us on the World Wide Web**  
**<http://www.brother.com/>**